
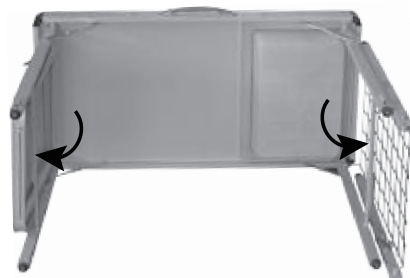


ASSEMBLY INSTRUCTIONS >>

DELUXE CAMP KITCHEN

Cabela's®

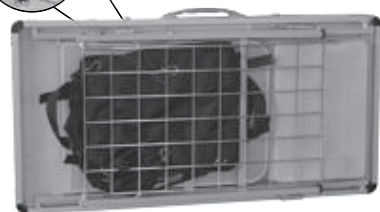

1. To open table, unlock the two side latches.

2. Lay table on its side and un-fold out table legs. Make sure corner locking braces are pushed down in the straight / locked position.


3. Stand kitchen upright, and raise each side table section.



4. Extend each side table sections legs. Straighten and lock all corner locking braces.

5. Attach zippered fabric pantry via the six (6) 'S'-hooks to the holes in MDF table top edge. Bottom hook-and-loop wraps help secure pantry to table legs.

6. Open table top. Straighten and lock all corner locking braces.

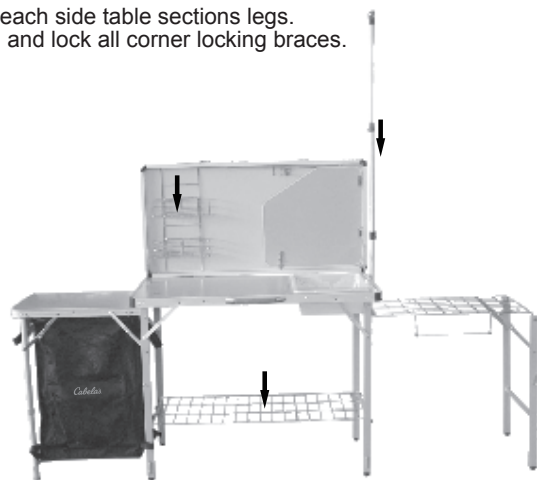


9. Secure kitchen table legs with included ground stakes.

7. Assembly the three-piece lantern pole. Install bottom wire shelf, spice rack, and hanging paper towel holder.

8. Swing open the MDF panel splash screen divider between table top and side wire table top. Lock in place.

Distributed by:
Bass Pro Shops®
Springfield, MO 65898
1-800-BASSPRO
www.basspro.com
www.cabelas.com
SKU# :
Item#: TA-541
MADE IN CHINA

Cabela's®

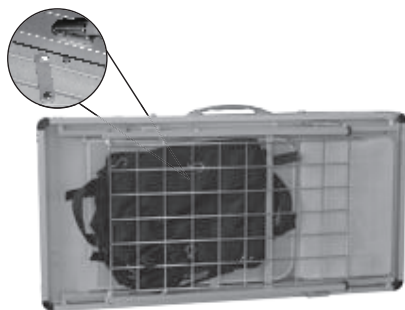

1. Pour ouvrir la table, débloquer les deux taquets latéraux.



2. Mettre la table sur le côté et déplier les pattes de table. S'assurer que les renforts de coin blocables sont poussés vers le bas dans la position droite / bloquée.




3. Mettre la cuisine à l'endroit et relever chaque section de table latérale.




4. Ouvrir les pattes de chaque section de table latérale. Placer et bloquer tous les renforts de coin blocables.



5. 1. Fixer le garde-manger en toile à fermeture à glissière à l'aide de six (6) crochets en « S » aux trous dans le rebord supérieur de la table MDF. Les bandes de Velcro inférieures aident à fixer solidement le garde-manger aux pattes de table.

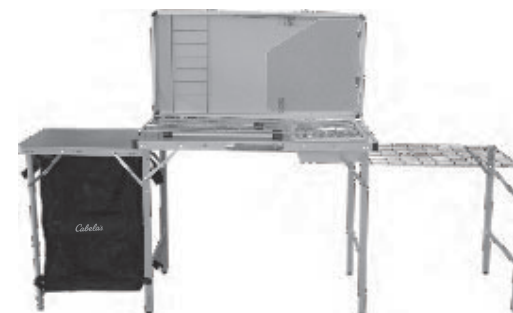

6. Ouvrir le dessus de table. Placer et bloquer tous les renforts de coin blocables.

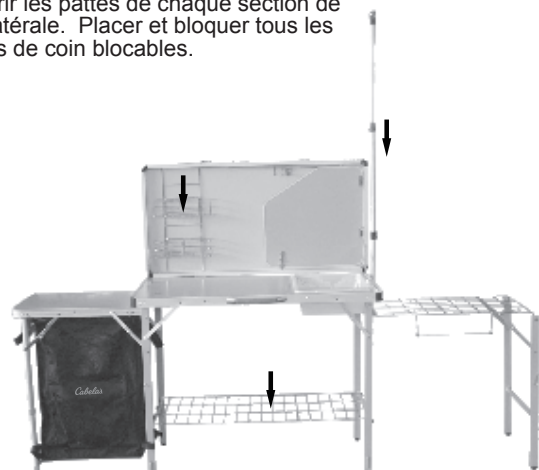

7. Assembler le poteau de lanterne en trois pièces. Installer la tablette en grillage inférieure, l'étagère à épices et le porte-serviettes de papier suspendu.



8. Ouvrir le panneau diviseur anti-éclaboussement entre le dessus de table et le dessus de table grillagé latéral. Bloquer en place.

9. Fixer solidement les pattes de table à l'aide des piquets fournis.

Distribué par :
Bass Pro Shops®
Springfield, MO 65898
États-Unis
1-800-BASSPRO
www.basspro.com
www.cabelas.com
N° UGS :
Item#: TA-541
FABRIQUÉ EN CHINE