

**WARNING**

Adult assembly required.
Keep screws and small parts out of the reach of children.
Assemble on a flat, level surface.

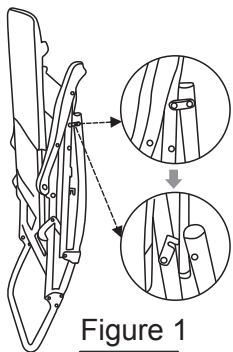


Figure 1

OPEN**Step 1**

- ◇ Unlock the rocker by lifting the latch off the bolt.
- ◇ Stand beside the chair and hold upright.

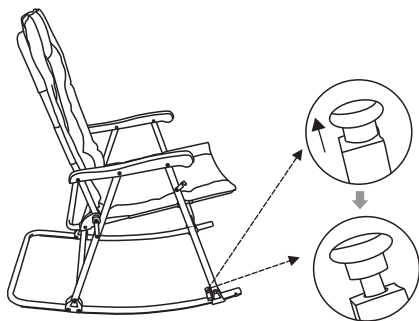


Figure 4

FOLD**Step 1**

- ◇ Pull up on the safety knob to release the lock.
- ◇ Stand beside the chair.

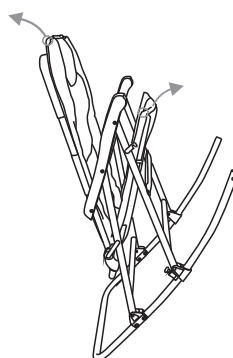


Figure 2

Step 2

- ◇ Place one hand on the top of the headrest and one hand on the edge of the seat.
- ◇ Slowly push in the opposite direction on both the headrest and the seat to open the chair.

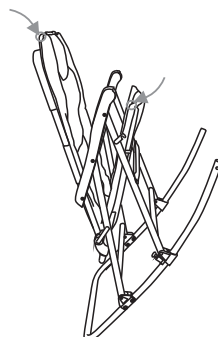


Figure 5

Step 2

- ◇ Place one hand on the top of the headrest and one hand on the edge of the seat.
- ◇ Slowly pull up on the seat, pushing the seat and headrest together.

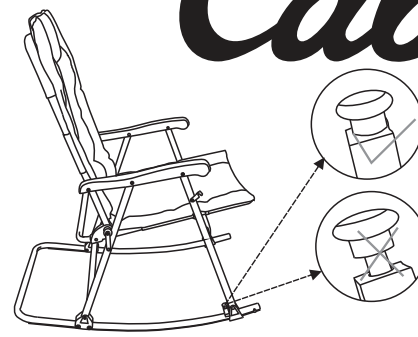


Figure 3

Step 3

- ◇ Continue to push the chair open until the safety knob is locked down into place. The rocker is safe to use when the knob is fully engaged.

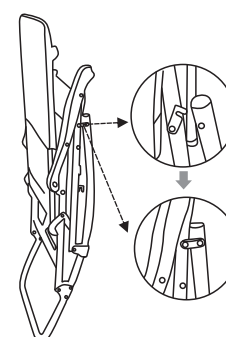


Figure 6

Step 3

- ◇ Lock the chair by lowering the latch onto the bolt.

Cabela's®

Distributed by:
Bass Pro Shops®
Springfield, MO 65898
1-800-BASSPRO
www.basspro.com
www.cabelas.com
SKU # 3491153
Item # A05-371C
MADE IN CHINA

! AVERTISSEMENT

Assemblage par un adulte est nécessaire.
Gardez les vis et les petites pièces hors de portée des enfants
Assemblez sur une surface plate et nivelée

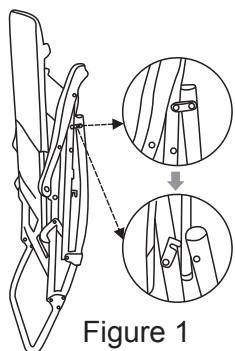


Figure 1

OUVRIR**Étape 1**

- ◇ Libérez la chaise à bascule en soulevant le pêne.
- ◇ Tenez-vous debout derrière la chaise et maintenez la en position verticale.

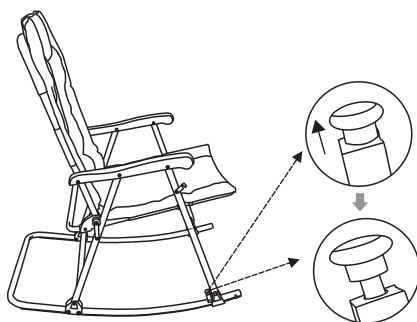


Figure 4

PLIER**Étape 1**

- ◇ Tirez le bouton de sûreté pour libérer le pêne.
- ◇ Tenez-vous debout à côté de la chaise.

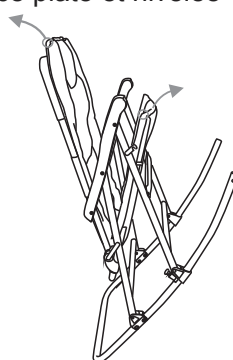


Figure 2

Étape 2

- ◇ Placez une main en haut du repose-tête et une main au bord du siège.
- ◇ Poussez doucement dans le sens opposé le repose-tête et le siège pour ouvrir la chaise.

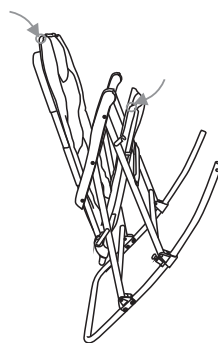


Figure 5

Étape 2

- ◇ Placez une main en haut du repose-tête et une main sur le bord du siège.
- ◇ Tirez doucement le siège vers le haut en rapprochant ensemble le siège et le repose-tête.

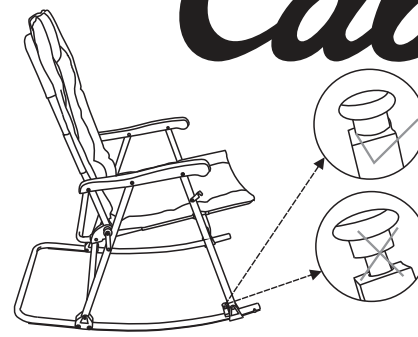


Figure 3

Étape 3

- ◇ Continuez à pousser la chaise ouverte jusqu'à ce que le bouton de sûreté soit bloqué en place.
- ◇ L'utilisation de la chaise à bascule est sûre lorsque le bouton est complètement engagé.

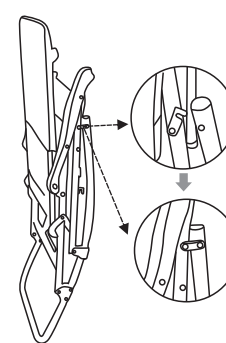


Figure 6

Étape 3

- ◇ Bloquez la chaise en abaissant le pêne

Cabela's®

Distribué par:
Bass Pro Shops®
Springfield, MO 65898
1-800-BASS-PRO
www.basspro.com
www.cabelas.com N°
UGS # 3491153
N°d'article # A05-371C
FABRIQUÉ EN CHINE